



INSTALLATION INSTRUCTIONS, SL Series Slider Bracket Between Studs Installation

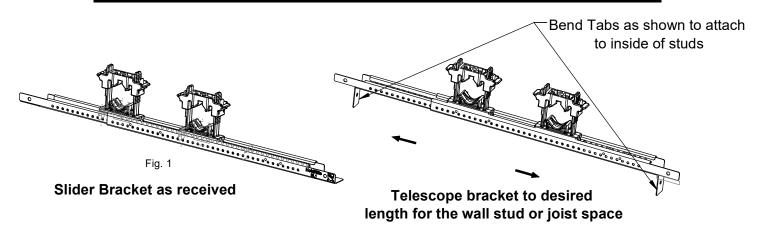

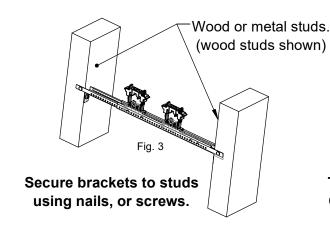

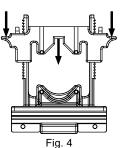

Tighten Top Clamp to secure Clamp to bracket and secure pipe or tubing to clamp

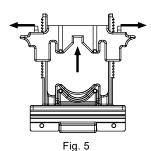

To release Top Clamp, pull tabs outward and lift Top Clamp

Model#	Description	Stud Bay Spacing	Number of Clamps
SL1-1	253 Clamp & Galvanized Steel Telescoping Bracket	10" to 16"	1
SL1-2	253 Clamps & Galvanized Steel Telescoping Bracket	10" to 16"	2
SL2-1	253 Clamp & Galvanized Steel Telescoping Bracket	13" to 24"	1
SL2-2	253 Clamps & Galvanized Steel Telescoping Bracket	13" to 24"	2

WARNING:


- The buyer and/or installer is responsible for:
 - Ápplication in conformance to local codes.
 - The integrity of structures to which the fasteners is attached, including their capability of safely accepting the load imposed, as evaluated by a qualified engineer. (Product load ratings are shown on the Product's Specification Sheet at WWW.HOLDRITE.COM)
- 2. Failure to observe these Instructions may lead to unsatisfactory product performance, which can result in property damage or bodily injury.

 
SAFETY INSTRUCTIONS: All safety regulations required by the job site must be observed. Special attention should be given to the following instructions. While working on a job site:

- 1. Wear safety glasses with side shields
- Wear gloves to avoid splinters and cuts.
- Be sure power tools are properly grounded.



INSTALLATION INSTRUCTIONS, SL Series Slider Bracket Between Studs Installation

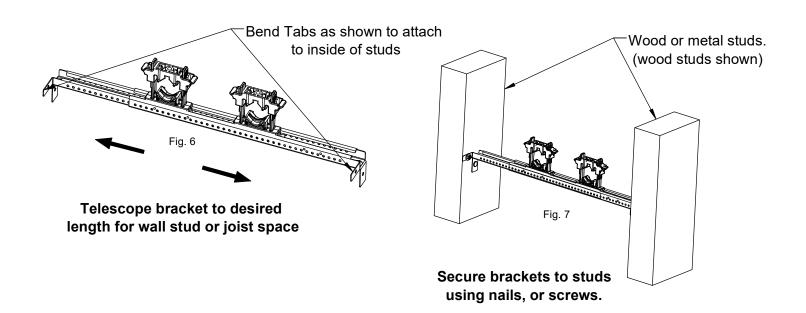



To add or remove Slider Clamps, slide the Clamp on or off either end of the Slider Bracket

