


Installation Instructions


HoldRite® HydroFlame™ Wrap Strips

WALL INSTALLATION

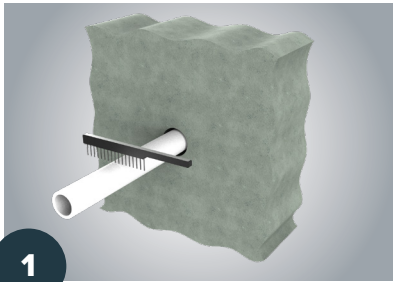


1

Clean plastic pipe.

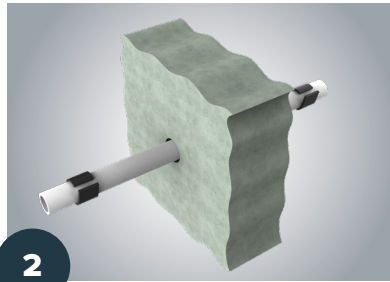


2

Apply wrap strips around plastic pipe for the specified number of times and fasten tightly using adhesive tape to both sides of wall assembly.

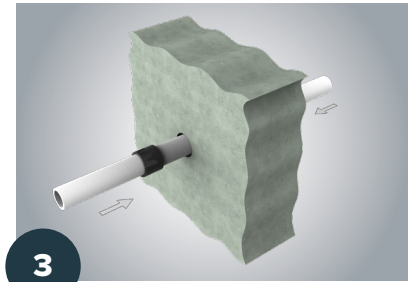

3

Slide wrap strips along the pipe and into the annular space as shown.

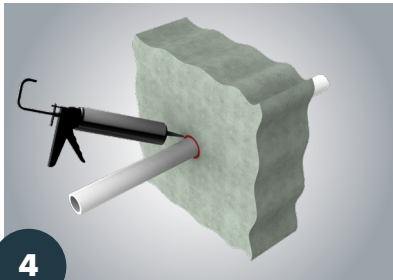

4


Apply caulking as required to close remaining gap to both sides of wall assembly; providing a smoke and gas resistant seal. Spread caulking smoothly and evenly all around.




Installation Instructions

HoldRite® HydroFlame™ Wrap Strips


FLOOR INSTALLATION

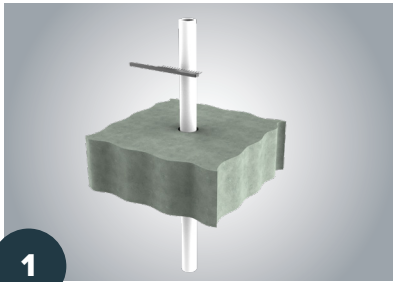**1**


Clean pipe.

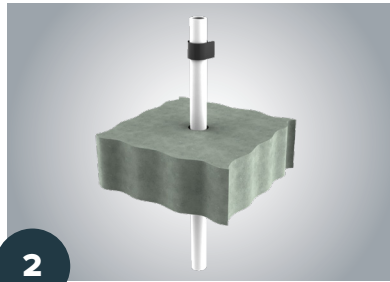**2**

Apply wrap strip around plastic pipe for the specified number of times and fasten tightly using adhesive tape to one side of floor assembly

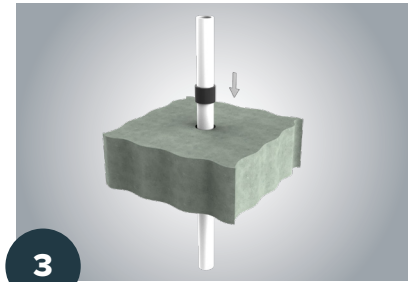**3**

Slide wrap strip along the pipe and into the annular space as shown.

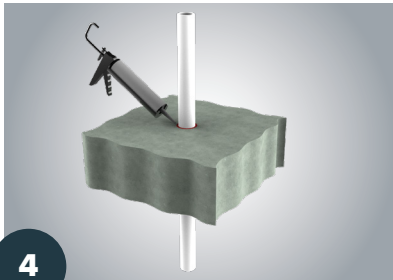**4**

Apply caulking as required to close remaining gap to one side of floor assembly; providing a smoke and gas resistant seal. Spread caulking smoothly and evenly all around.

