


Installation Instructions

HoldRite® HydroFlame™ 300SL

FLOOR INSTALLATION

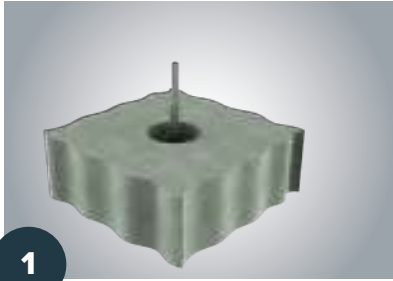

Clean opening.



Install pipes or cables. Install backing material as required into annular space as shown on one side of floor assembly.



Apply caulking as required to close remaining gap to one side of floor assembly; providing a fire smoke and gas resistant seal. Spread caulking smoothly and evenly all around.

