




REMOVE OUTER SLEEVE & UNSCREW CAP. (Fig. 1)

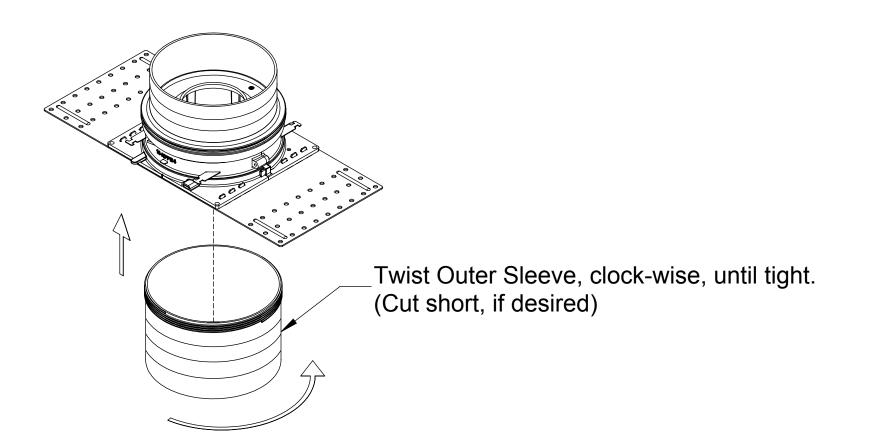



INSTALL INVERTED OUTER SLEEVE TO UNDER SIDE. (Fig. 4)


Hydroflame PRO Series - Metal Deck (pg. 1 of 2). See Hydroflame Pro - "Best Practices" document and UL's online certification directory (file R25101) for more details. Rev B

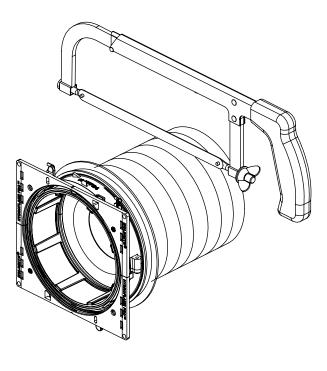




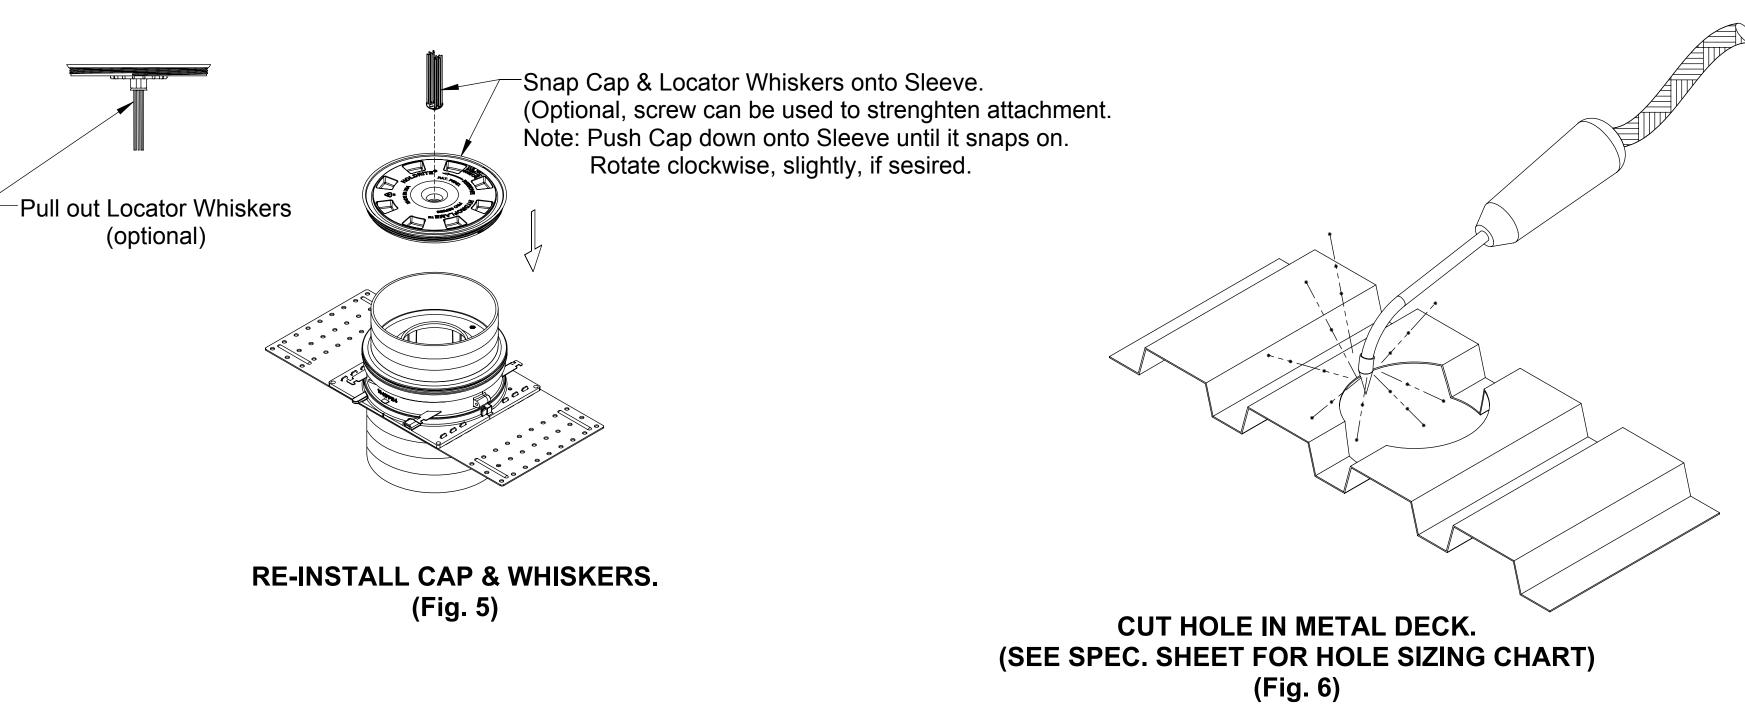

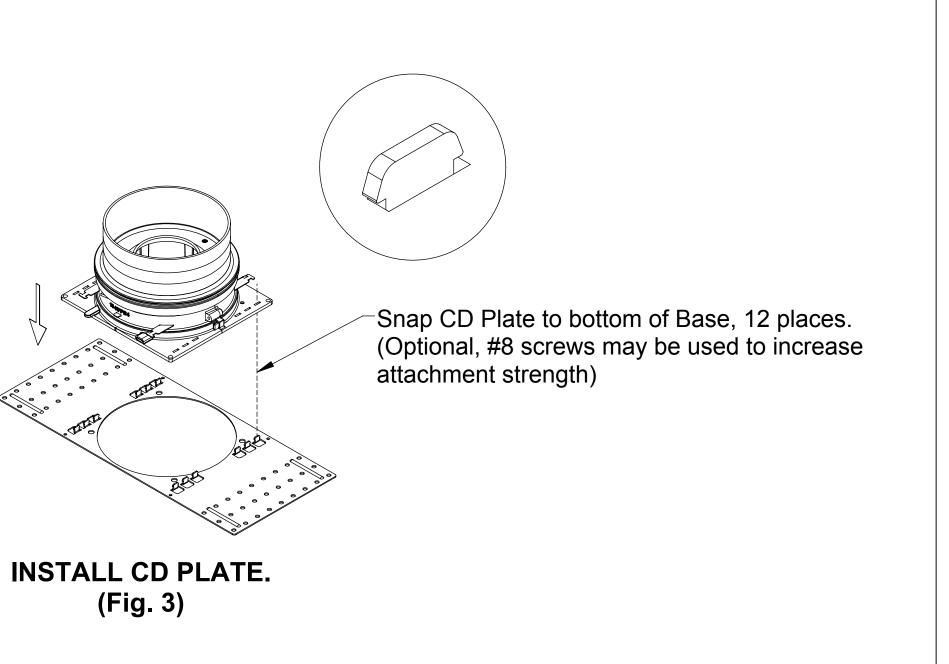

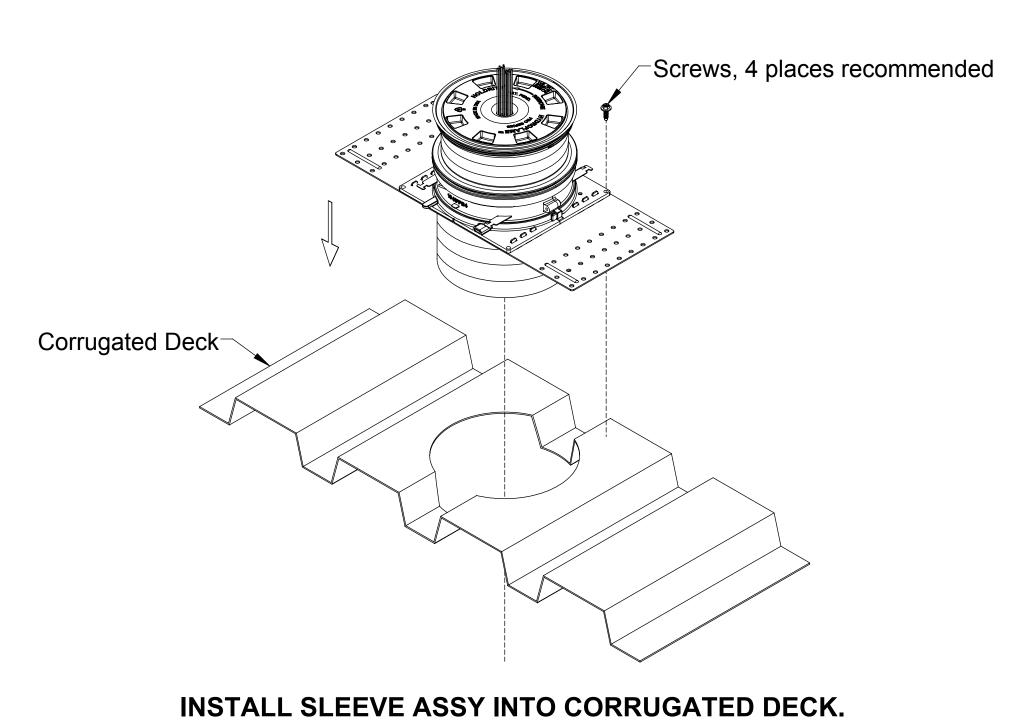



(Fig. 7)

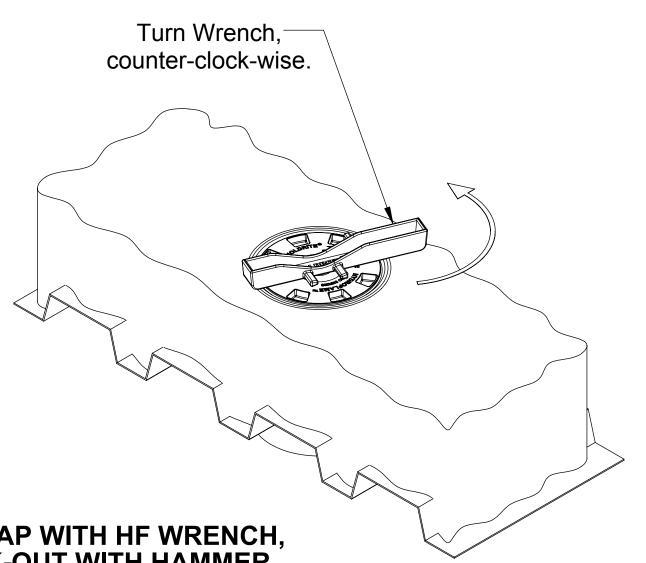

REMOVE CAP WITH HF WRENCH, OR BREAK-OUT WITH HAMMER. (Fig. 9)

Hydroflame PRO Series - Metal Deck (pg. 2 of 2). See Hydroflame Pro - "Best Practices" document and UL's online certification directory (file R25101) for more details. Rev B

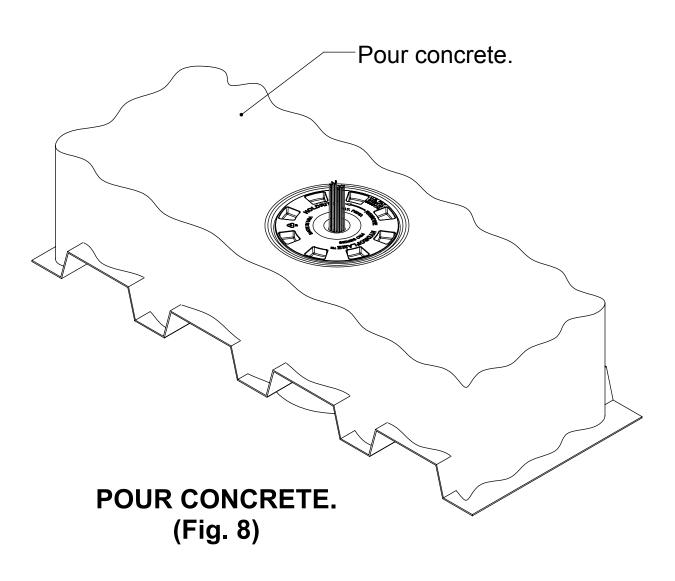

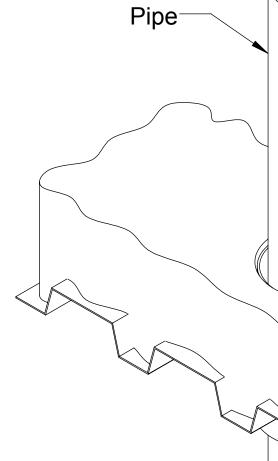



INSTALL PIPE FROM BELOW.

(SOAPY WATER EASES PIPE INSERTION) (Fig. 10)